

## Measurements



Measure the width at the top where the track will be installed



Measure the height of the opening at the left, right and centre and use the shortest of the three

## Installation



Open the box and remove the contents



Take the track and position it at the centre of of the soffit. Then use a felt-tip pen to mark the positions of the holes (at least three are recommended)



Drill the holes and insert the appropriate plugs for the wall material



Fit the track in the door and make sure that all the wheels are inserted



Position the door complete with track in the opening




First tighten the centre screw and then tighten the others, moving the door as required



Fit the rear springs of the upright at the center of the wall (similarly to the track)



Lubricate the springs with Vaseline and then push the door against them until they engage

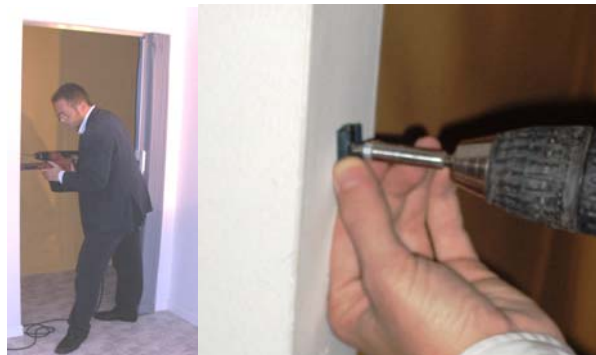


Fit the springs of the door jamb at the centre of the wall



Measure the PVC jamb and adapt it by centring it with the door (the jamb is generally made longer at the bottom so that it can be cut to size)



The PVC jamb can now be fitted onto the springs

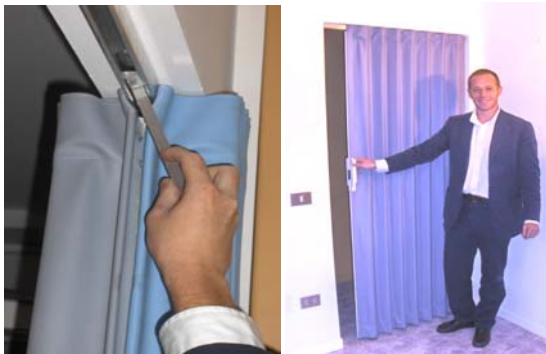

Lubricate the inside of the track with Vaseline.

**FANOFLEX di Fenzi Marinella**  
Via Ugo La Malfa, 11 - Zona Industriale  
61030 BELLOCCHI di FANO (PU)  
Tel. +39.0721.855448 - Fax +39.0721.855484

e-mail: [info@porteousoffietto.com](mailto:info@porteousoffietto.com)